



PLEASE READ AND FOLLOW ALL WARNINGS



AIR TOOLS

FP733M & FP733W

1/4" Mini Ratchet Sq. Dr. & Wobble Dr.



Read Operating Instructions

Always become familiar with all the instructions and warnings before operating any power tool.

Always Wear Approved Eye Protection

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1, Occupational and Educational Eye and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.



Hearing Protection is Recommended

Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.



Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.



90 PSIG Maximum

This tool is designed to operate at


an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and dry, preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

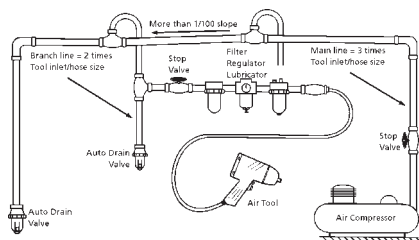

Description

Florida Pneumatic ratchet wrench is designed for a wide variety of fastening applications. This unit features a patented reverse-change rotation on the job. A built-in toggle style power regulator. Ergonomic grip with sunken throttle lever. Extended flat head design improves access. Visual rotation direction indicators. Heavy duty anti-ratchet head.



Safety Instructions

The following instructions are furnished as general guidelines for use of your pneumatic tool. They cannot comprehensively cover all possible or conceivable uses of the subject tool. For additional information on the safe use of air tools, we advise you to obtain a copy of ANSI B186.1 Safety Code for Portable Air Tools, available from the following source:

American National Standards Institute, Inc.
11 West 42nd Street
New York, NY 10036.

The use of the word "shall" in the following instructions, indicates that adherence to the particular requirement is necessary to conform to ANSI B186.1.

Tool Application and Usage

Portable tools shall be used only for the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator in the safe use of the tool. Tools shall not be used without guards and safety

devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in ANSI B186.1.

Tool Installation

Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjoined, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.

Florida Pneumatic Manufacturing Corporation
851 Jupiter Park Lane, Jupiter, Florida 33458
Toll Free 1-800-327-9403

Read these instructions carefully before attempting to install, operate or service this Florida Pneumatic product. Failure to comply with the instructions could result in personal injury and/or property damage! Retain these instructions for future reference.

FPMC




FP733M & FP733W

1/4" Mini Ratchet Sq. Dr. & Wobble Dr.

Drive size.....1/4"
Free speed.....350 RPM
Maximum Torque.....25 ft.-lbs.
Bolt Capacity.....3/8"
Weight..... 1.3 lbs.
Overall length..... 6.5"
Air consumption.....4 CFM
Recommended hose size.....3/8"
Air inlet.....1/4" NPT
Maximum operating press.....90 PSI

Parts Breakdown for FP733M & FP733W**USE ONLY POWER SOCKETS & ACCESSORIES**

Sockets and accessories used shall be of the power socket type. Always check sockets, retainers and drives regularly for wear or damage and replace whenever necessary

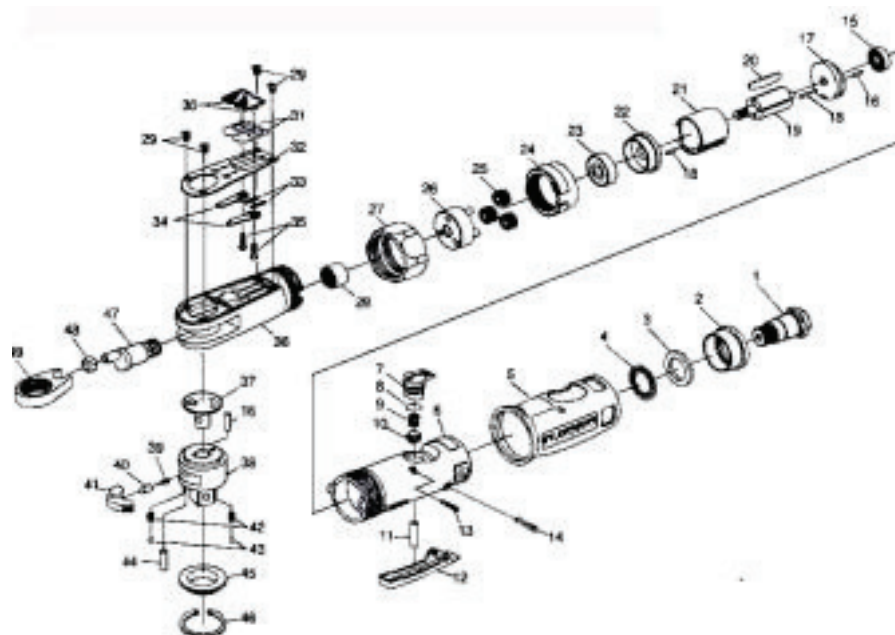

FP733M & FP733W

1/4" Mini Ratchet Sq. Dr. & Wobble Dr.

Replacement Parts for FP733M & FP733W

Ref.	Description	Part #	Ref.	Description	Part #
1	Bushing	8901291	26	Idler Gear Plate	8731970
2	Muffler Cover	8901292	27	Rock Ring	8901302
3	Muffler	8901293	28	Needle Bearing	8731972
4	Silencer	8901294	29	Screw (4)	8901303
5	Body Cover	8901295	30	Reverse Button (2)	8901304
6	Body	8901296	31	Plate (2)	8901305
7	Air Regulator	8901297	32	Cover Plate	8901306
8	O-Ring	8900990	33	Spring (2)	8901307
9	Throttle Spring	8729163	34	Reverse Arm (2)	8901308
10	Valve Ball	81015215	35	Cap Screw (2)	8901282
11	Throttle Pin	8900270	36	Ratchet Housing	8901309
12	Throttle Lever	8901298	37	Reverse Gear	8901310
13	Pin	8731930	38	Spindle (FP733M)	8901311
14	Lever Pin	8731259	38	Spindle (FP733W)	8901312
15	Ball Bearing	8901249	39	Reverse Spring	8731980
16	Roll Pin (2)	8900720	40	Reverse Pin	8731979
17	Rear Plate	8901299	41	Ratchet Pawl	8900509
18	Roll Pin (2)	8900720	42	Spring (2)	8731983
19	Rotor	8901300	43	Steel Ball (2)	8731984
20	Rotor Blade (4)	8731269	44	Ratchet Pin	8731982
21	Cylinder	8731268	45	Thrust Washer	8731985
22	Front Plate	8731964	46	Snap Ring	8900799
23	Ball Bearing	8731274	47	Crank Shaft	8900503
24	Internal Gear	8901301	48	Dowel Pin	8731976
25	Idler Gear (3)	8731969	49	Yoke	8731975

Limited Warranty

Florida Pneumatic warrants its tools to be free from defects in material and workmanship for two years from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Florida Pneumatic or its authorized service centers. If a Florida Pneumatic proves defective in material of workmanship within one year after purchase, return it to any authorized service center or to Florida Pneumatic, freight prepaid. Please enclose your name, address and adequate proof of purchase date with a brief description of the defect. Florida Pneumatic will, at its option, repair or replace defective tools, free of charge. Repairs or replacements are warranted as described above for the remainder of the warranty period. Florida Pneumatic's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Florida Pneumatic shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or replacement as described above.